



Necessary preliminary tasks:

- Remove rear reinforcement plate
- Remove exhaust system from exhaust manifold and support
- Remove middle heat shield

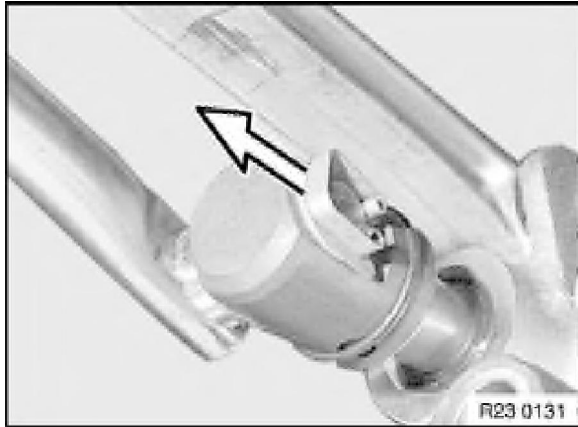

Detach locking clip.

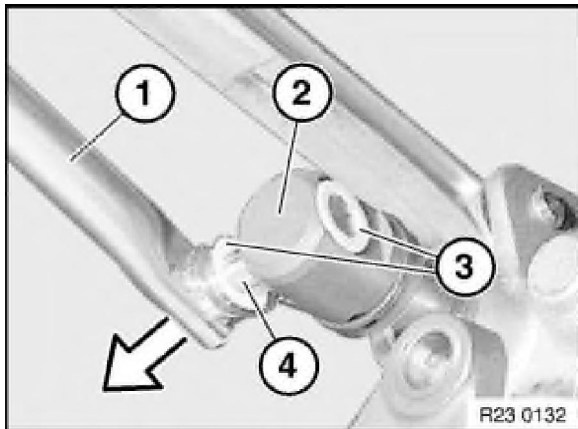


Pull shift rod (1) out of shift rod joint (2) and remove shims (3).

Installation:

Grease shift rod pin (4).

Large contact surface of disks (3) must rest against shift rod joint (2).

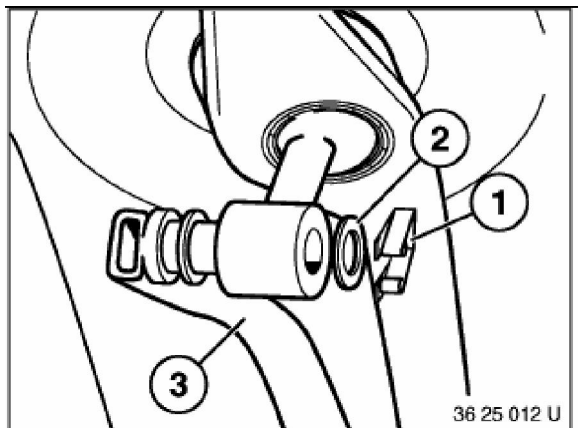

Detach locking clip (1).

Remove disk (2).

Remove selector rod (3).

Installation:

Grease shift rod pin ().